

Pin Up

BY **SOLACE**
ACOUSTIC PANELS



INSTALLATION
GUIDE



844.458.8115 | heartlandcollection.us


PIN-UP Installation Guide

Effortless Installation Methods

Pin-Up boards offer two simple installation options to suit your needs. Choose between impaler clips or adhesive for a secure and hassle-free setup.

Impaler Clips: Attach impaler clips to your wall using sheetrock screws, then press the Pinup board firmly onto the clips for a strong hold.

Adhesive: Apply either Liquid Nails or 3095 Carpet Glue Adhesive to the back of the Pinup board, then press it onto the wall, ensuring even distribution for a lasting bond.

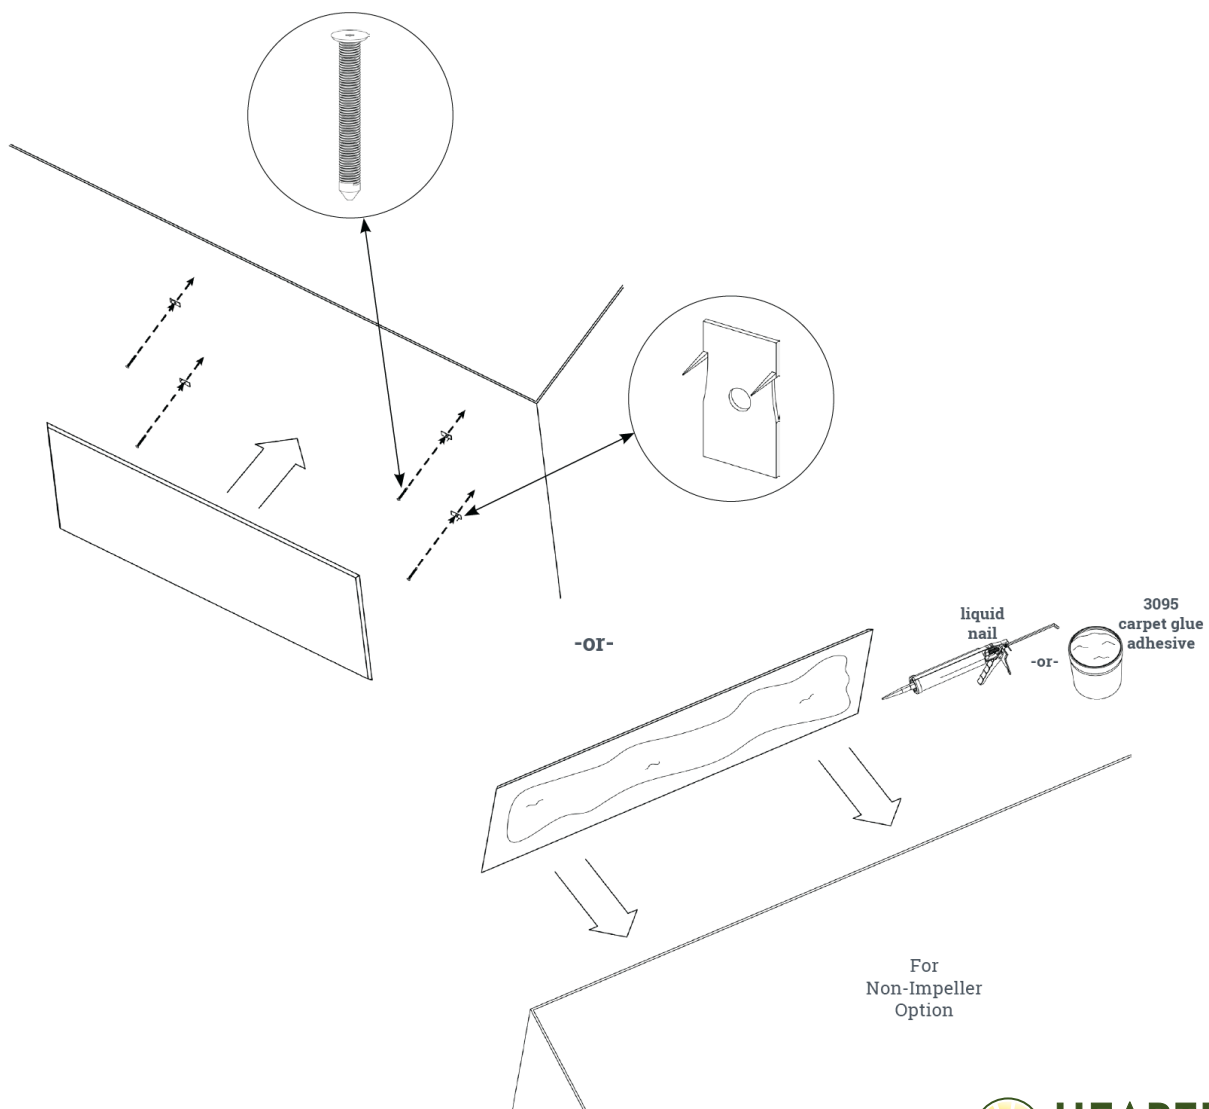

Cutting Pin-Up Acoustic Panels On-Site

To cut Pin-Up acoustic panels in the field, follow these simple steps for precise and clean results:

1. **Measure and mark:** Using a measuring tape and straight edge, mark the desired cutting line on the panel with a non-permanent marker or chalk.
2. **Secure the panel:** Place the Pin-Up panel on a stable, flat surface, ensuring that the cutting line extends beyond the edge of the surface to avoid damaging the underlying material.
3. **Use a sharp utility knife:** With a fresh blade on a utility knife, carefully score along the marked line, applying firm, even pressure. Multiple passes may be necessary to achieve a clean cut.
4. **Snap and trim:** Once scored, gently bend the panel along the cut line, allowing it to separate cleanly. If needed, use the utility knife to trim any uneven or excess material for a smooth finish.

Always exercise caution when handling sharp tools and follow safety guidelines to avoid injury.

